

Equipment CONTROLS

Power & TV Power

- Turns the receiver on/off.
- Turns the TV on/off.*

Mode Buttons

(on the side of the remote)

- » SAT: controls the satellite receiver. You will stay in SAT mode most of the time.
- » TV: controls your TV.*
- » INPUT: changes TV input
Press the TV button above, then press the INPUT button to see video from other equipment connected to your TV.

*Only works in TV mode. Not applicable with certain TV makes/models.

Basic Troubleshooting TIP

The main technical issue experienced is the TV is on the wrong input.

When your TV says "no signal" or is displaying a black, blue or snowy screen, you may be on the wrong input. Make sure the Dish receiver is turned on, showing one green light. Using the DISH remote control, press the TV button on the upper left side of the remote. Then press the input button (two buttons below the TV button on the left side of the remote) one or more times, typically to HDMI1 input or until a picture appears. Once the TV picture is restored, please remember to press the SAT button (top left button on the side of the remote) to change the channels and control the satellite receiver.

Basic Navigation CONTROLS



- **Guide**
Display current and future TV program listings.
- **Arrows/Browse**
With the Arrows, channel up/down to navigate menus and the guide. For Browse (right arrow), look for other channels while watching TV.
- **Select**
Select a show or menu option—like an enter button.
- **TV Volume**
Press the + or – buttons to raise or lower the volume.
- Please remember to use the remote that is labeled for the room you are in!



For Assistance Call Us at 251.967.4455